
 


Quick Start Guide

POS80FE

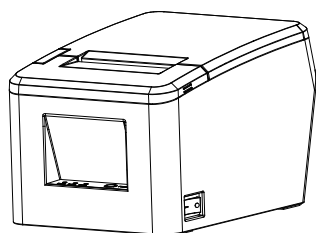

Packing List



Printer



USB Cable



Power Cord



Power Adapter



Serial Cable



Quick Start Guide




CD

⚠Notes:


1. The packing materials are actually dependent on the order.
2. The power adapter and power cord vary by local or region.

Appearance


■ Front

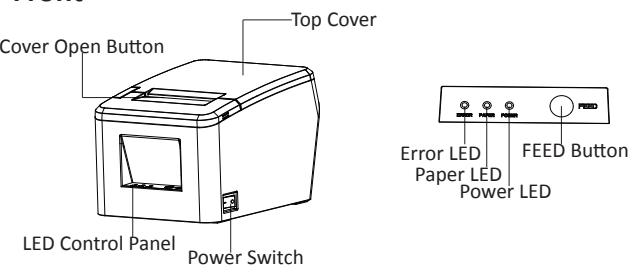

■ Back

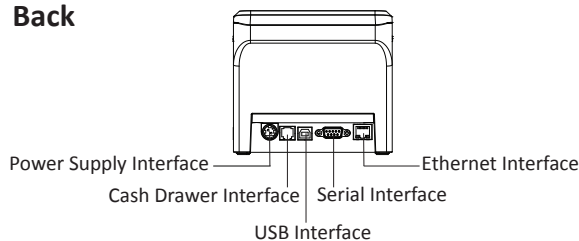


■ Opening Top Cover


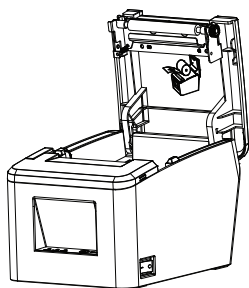


Paper Loading

1. Press the cover open button to open the top cover.
2. Remove the used roll paper core, if any.

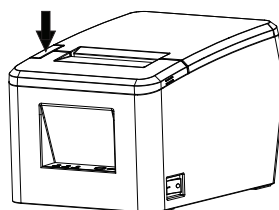


 3. In the correct direction of the roll paper , install the roll paper.

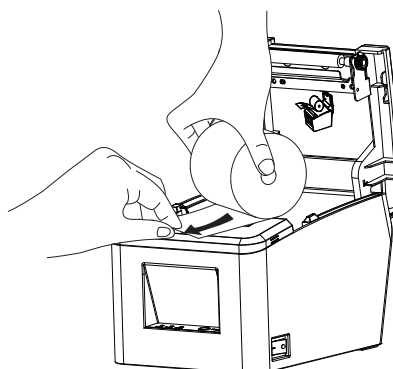


Thermosensitive Layer

3. Pull out some roll paper, and close the top cover.

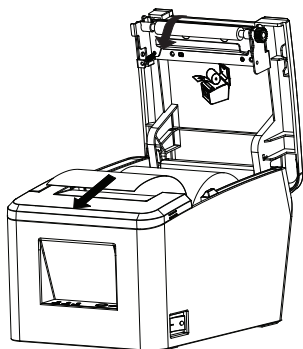

4. Tear the extra paper of the printer.



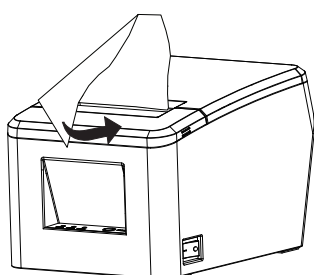


Interface

1




 
2

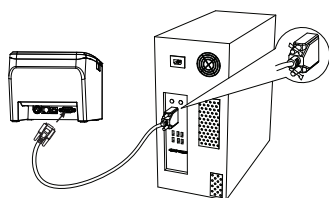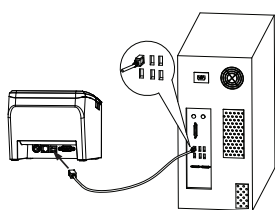

3




4

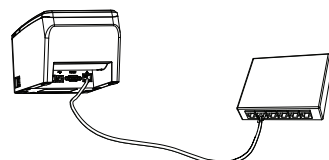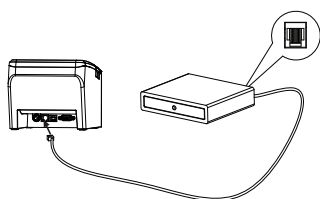


Power Supply

 1. Make sure the printer power is turn off.
2. Connect power adapter with printer.
3. Connect power adapter with power cord.
4. Plug the other side of power cord into the socket outlet.



1

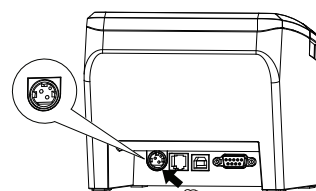

2

Power Adapter

3





4



Power Cord

Remove Jammed Paper

1. When a paper jammed, do not press the cover open button to avoid damaging the blade.
2. Fix the printer by one hand and press either side of the convex bars by the other hand. Push up and open the front cover.

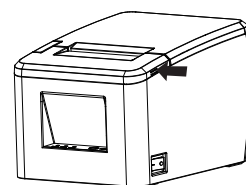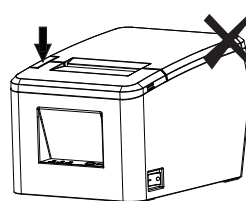


3. Please rotate the gear until the blade returns to its normal position, as shown in Figure 2.

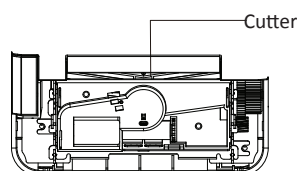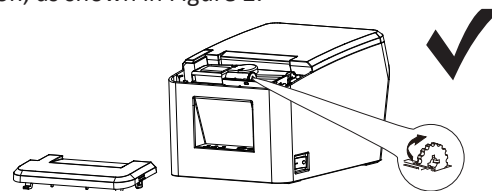

When cutter jammed, the cutter does not retreat back and can be seen.

Figure 1

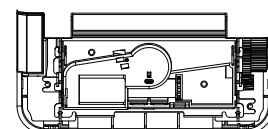

Cutter retreats back totally and cannot be seen.

Figure 2